

## HOT TUB HEATING INSTRUCTION

- 1) Pour water into the tub (a dark blue water hose is near the tub). Next to the tub, on the ground under the gray lid, there is a water tap to open the water supply. Open the lid of the tub slightly and insert the tip of the hose into the tub. Check that the water outlet tap is closed (it is located next to the hot tub stove, on the right side, closer to the ground), the tap should be in the CLOSE position (or perpendicular to the pipe).
- 2) Add water to the tub so that the water level is about 20 cm to the edge of the tub (water should be left for about 35 min).
- 3) Start heating the hot tub only when it's filled with water! The cover of the tub must be left on the tub at all the time during heating!
- 4) The kindling in the stove is prepared, lighters or matches, gloves and scissors for opening the firewood bags are in the cabin on the stair construction. Light the kindling. When it lights up well (after about 5 minutes), put firewood in the stove so that the stove is quite full.
- 5) Every 30-40 minutes, add firewood to the stove. And from time to time, turn on the bubbles (the first button on the right) to stir the water in the tub and heat it evenly.
- 6) The tub has a built-in water thermometer next to the bubble button. The optimal temperature to which the tub should be heated is 38-40 degrees (to this temperature the tub should be heated for about 1.5-2 h), but temperature depends on individual wishes, according to the feelings and desires of each heat.
- 7) When the tub is heated to the required temperature, do not put the firewood in the stove again. The hot tub temperature is maintained for about 4 hours.
- 8) Take off the cover in two - each from its own side. Place the cover on the ground, horizontally (lying down), so that you do not step on it.
- 9) If you have heated the tub too hot, add cold water with the dark blue water hose next to the tub. In this case, it is necessary to drain the water slightly from the tub so that the water does not pass over the edges of the tub. At the bottom right of the stove, there is a water outlet pipe with a tap (red), which, when turned to the OPEN position (parallel to the pipe), will open, and drain the water. When the required water level in the tub is reached (so that it does not pass the sides of the tub), turn the tap to the CLOSE position (perpendicular to the pipe).
- 10) The tub is equipped with 3 buttons. The first from the left - the strength of the bubbles, the middle - the lights (several colors are available), the first from the right - turn the bubbles on / off.
- 11) After using the tub, it is mandatory to drain all the water. However, this can only be done when the stove is no longer hot. At the bottom right of the hot tub, there is a water outlet pipe with a tap, which when turned to the OPEN (parallel to the pipe), position will open and drain the water. Put the cover back on.